

Bottom Edison – barcodes


The bottom Edison is the driving Edison.

Program the driving Edison


The driving Edison will control the movement of the EdTank (forwards, backwards, turn left and turn right). Drive this Edison over the following barcodes, programming each to a button that corresponds well with the driving manoeuvre on the remote control. Don't use buttons that you want to use to control the cannon.

Reading the barcode

1. Place Edison facing the barcode on the right side
2. Press the record (round) button 3 times
3. Edison will drive forward and scan the barcode
4. Press a button on your TV/DVD remote that you want to activate that function

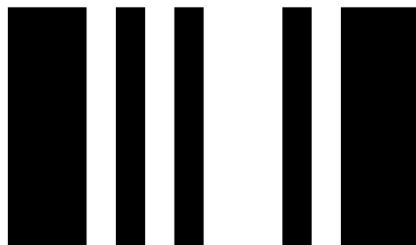

Barcode – IR learn drive forward

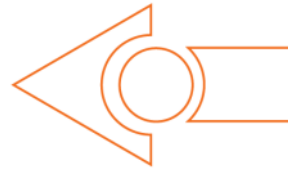

Barcode – IR learn drive backward



Barcode – IR learn turn right



Barcode – IR learn turn left

